




Suggested N-Tune™ wiring for use in the tone control position of a Fender™ Telecaster™.

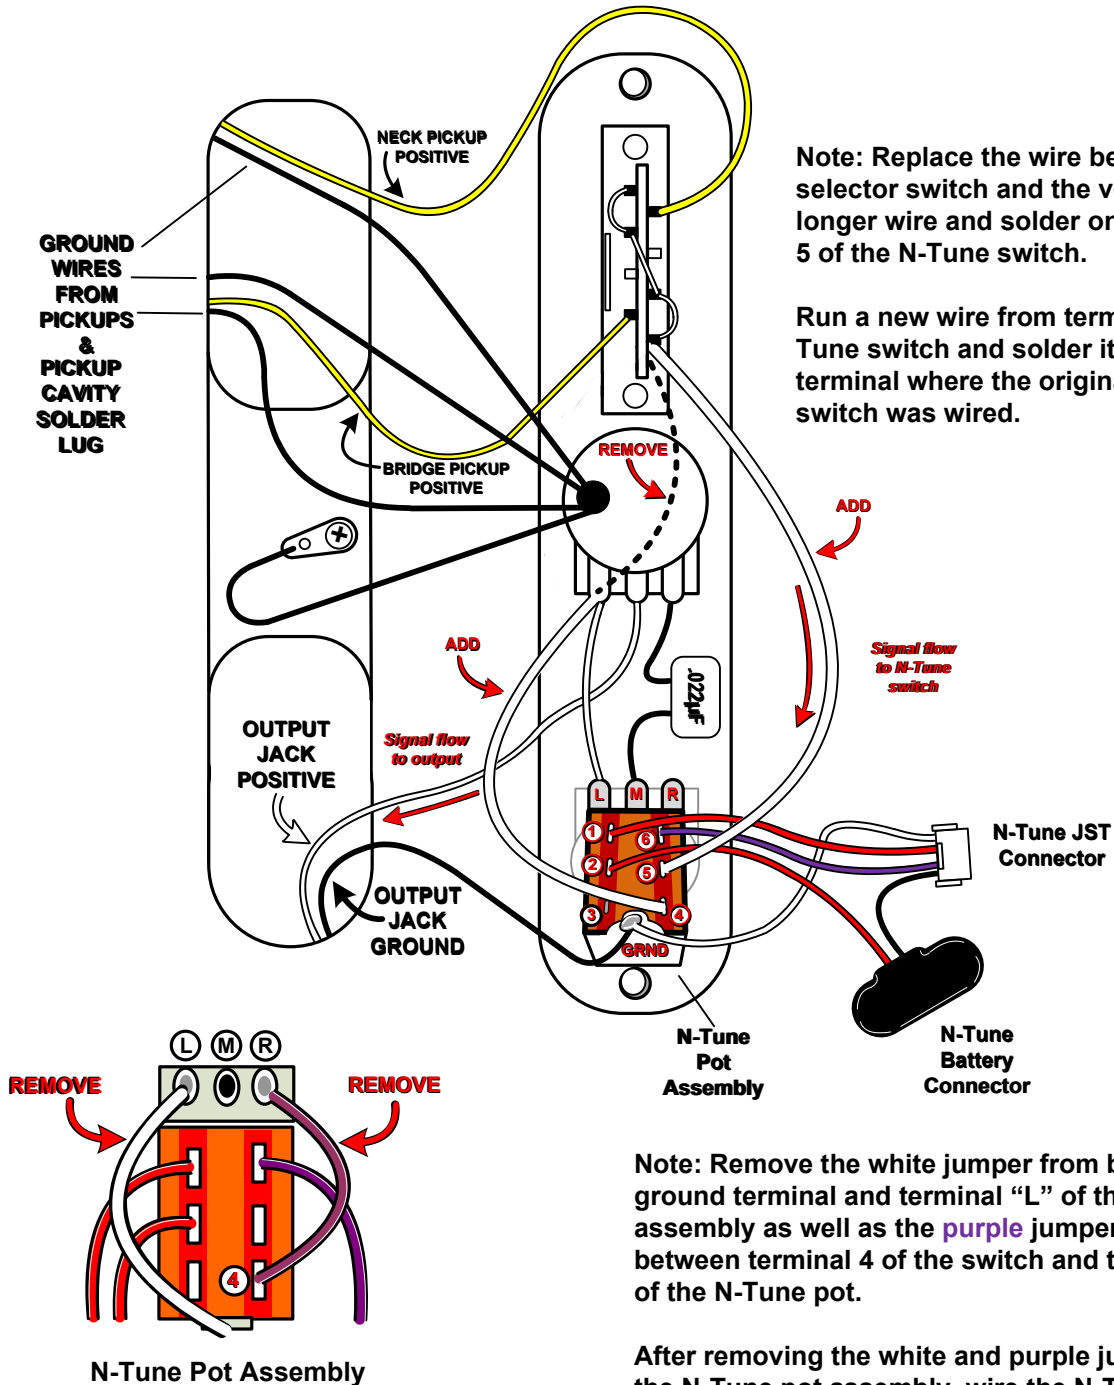

Note: Replace the wire between the pickup selector switch and the volume pot with a longer wire and solder one end to terminal 5 of the N-Tune switch.

Run a new wire from terminal 4 of the N-Tune switch and solder it to the volume pot terminal where the original pickup selector switch was wired.

Note: Remove the white jumper from between the ground terminal and terminal "L" of the N-Tune pot assembly as well as the purple jumper from between terminal 4 of the switch and terminal "R" of the N-Tune pot.

After removing the white and purple jumpers from the N-Tune pot assembly, wire the N-Tune pot leads in the same configuration as the original tone pot.